

User Manual

SAJ Solar Inverter Suntrio Plus Series









Preface

Thank you for choosing a SAJ solar inverter. We are pleased to provide you with first-class products and exceptional service.

This manual includes information for installation, operation, maintenance, trouble shooting and safety. Please follow the instructions of this manual so that we can ensure delivery of our professional guidance and wholehearted service

Customer-orientation is forever our commitment. We hope this document proves to be of great assistance in your journey for a cleaner and greener world

Please check for the latest version at www.saj-electric.com

Guangzhou Sanjing Electric Co., Ltd.

Building e-Energy management solution provider



Content

Preface		1 -
Chapter 1	Safety Precautions.	4 -
	1.1 Scope of Application	4 -
	1.2 Safety Instructions	4 -
	1.3 Target Group	5 -
Chapter 2	Preparation	6 -
	2.1 Safety Instructions	6 -
	2.2 Explanations of Symbols	8 -
Chapter 3	Product Information	10 -
	3.1 Application Scope of Products	10 -
	3.2 Specification for Product Model	11 -
	3.3 Overview and Dimensions of products	11 -
	3.4 Datasheet	12 -
Chapter 4	Instructions for installation.	14 -
	4.1 Safety Instructions	14 -
	4.2 Pre-installation Check	14 -
	4.3 The Determination of the Installation Method and Position	15 -
	4.4 Mounting Procedure	17 -
Chapter 5	Electrical Connection	19 -
	5.1 Safety Instruction for Hot-line Job	19 -
	5.2 Specifications for Electrical Interface	20 -
	5.3 AC Side Connection	20 -
	5.4 DC Side Connection	22 -
	5.5 Communication Connection	25 -
Chapter 6	Debugging Instructions	27 -
	6.1 Introduction of Human-computer Interface	27 -



	6.2 First Run Setup	28
	6.3 Monitoring Operation	36
Chapter 7	Fault Code and Troubleshooting	37
Chapter 8	Recycling and Disposal	40
Chapter 9	Guarantee Service.	41
Chapter 10	Contact SAJ	42
SAJ Warr	anty Policy	43
Warranty C	ard	47



Chapter 1 Safety Precautions

1.1 Scope of Application

This User Manual describes instructions and detailed procedures for installing, operating, maintaining, and troubleshooting of the following SAJ grid-tied inverters:

Suntrio Plus 4K; Suntrio Plus 5K; Suntrio Plus 6K;

Suntrio Plus 8K; Suntrio Plus 10K.

Please keep this manual all time available in case of emergency.

1.2 Safety Instructions



DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

 \cdot WARNING indicates a hazardous situation which, if not avoided, can result in death or serious injury or moderate injury.

\bigwedge C

CAUTION

· CAUTION indicates a hazardous condition which, if not avoided, can result in minor or moderate injury.



NOTICE

· NOTICE indicates a situation that can result in potential damage, if not avoided.



1.3 Target Group

Only qualified electricians who have read and fully understood all safety regulations contained in this manual can install, maintain and repair the inverter. Operators must be aware of the high-voltage device.



Chapter 2 Preparation

2.1 Safety Instructions



DANCER

- · Dangerous due to electrical shock and high voltage.
- · Do not touch the operating component of the inverter, or it might result in burning or death
- · To prevent risk of electric shock during installation and maintenance, please make sure that all AC and DC terminals are plugged out.
- · Do not touch the surface of the inverter while the housing is wet, or it might lead to electrical shock.
- Do not stay close to the inverter while there are severe weather conditions including storm, lighting, etc.
- Before opening the housing, the SAJ inverter must be disconnected from the grid and PV generator; you must wait for at least five minutes to let the energy storage capacitors fully discharged after disconnecting from power source.



WARNING

- The installation, service, recycling and disposal of the inverters must be performed by qualified personnel only in compliance with national and local standards and regulations.
- Any unauthorized actions including modification of product functionality of any form may cause lethal hazard to the operator, third parties, the units or their property. SAJ is not responsible for the loss and these warranty claims.
- ·The SAJ inverter must only be operated with PV generator. Do not connect any other source of energy to the SAJ inverter.
- ·Be sure that the PV generator and inverter are well grounded in order to protect safety of people's life and property.

A CAUTION

- · The PV inverter will become hot during operation. Please do not touch the heat sink or peripheral surface during or shortly after operation.
- ·Risk of damage due to improper modifications.





·Public utility only

·The PV inverter is designed to feed AC power directly to the public utility power grid; do not connect AC output of the inverter to any private AC equipment.



2.2 Explanations of Symbols

Symbol	Description
14	Dangerous electrical voltage This device is directly connected to public grid, thus all work to the inverter shall only be carried out by qualified personnel.
₹ Smin	DANGER to life due to high electrical voltage! There might be residual currents in inverter because of large capacitors. Wait for 5 MINUTES before you remove the front lid.
<u>^</u>	NOTICE, danger! This is directly connected with electricity generators and public grid.
<u> </u>	Danger of hot surface The components inside the inverter will release a lot of heat during operation. Do not touch metal plate housing during operating.
	An error has occurred Please go to Chapter 9 "Troubleshooting" to remedy the error.
Z	This device SHALL NOT be disposed of as residential waste Please go to Chapter 8 "Recycling and Disposal" for proper treatments.
X	Without Transformer This inverter does not use transformer for the isolation function.
TÜVRheinland GEITIFE O TÜVRheinland GEITIFE O WITE Des GEORGOOOD	Security Certificate The inverter complies with European product safety instructions.
C€	CE Mark Equipment with the CE mark fulfills the basic requirements of the Guideline Governing Low-Voltage and Electro-magnetic Compatibility.
SAA	SAA Mark The inverter complies with the requirement of Equipment and Product Safety Act in Australia.
CAC	CQC Mark The inverter complies with the safety instructions from China's Quality Center.



Risk of electric shock! Only authorized operations are allowde to do disasseembly, modification or maintenance. Any resulting defect or damage (device/person) is not covered by SAJ guaranty.

No unauthorized operations or modifications

Any unauthorized operations or modifications are strictly forbidden, if any defect or damage (device/person) occurs, SAJ shall not take any responsibility for it.




Chapter 3 Product Information

3.1 Application Scope of Products

Suntrio Plus series products are grid-tied single phase inverters without transformers, and the inverters are important components of grid-tied solar power systems.

The Suntrio Plus inverters change the DC generated by solar panels into AC which is in accordance with the requirements of public grid, and send the AC into the grid, Table 3.1 shows the structural diagram of the typical application system of Suntrio Plus inverters

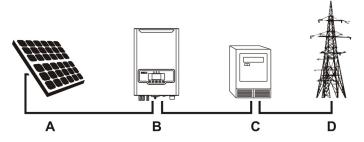

Name	Description	Remarks
A	Solar panels	Monocrystalline or polycrystalline silicon, and thin-film PV modules with II protection and need no ground connection
В	Inverters	Suntrio Plus 4K/5K/6K/8K/10K
С	Metering equipment	Standard metering tool for measuring the output electric power of inverters
D	Power grid	TT, TN-C, TN-S, TN-C-S

Table 3.1 Systematic Configuration Diagram



3.2 Specification for Product Model

Suntrio Plus XK

- 1) 2
- ① Suntrio Plus represents for product name.
- ② XK represents rated power XkW of inverter, for example 5K means 5kW.

3.3 Overview and Dimensions of products

The dimensions of Sununo Plus series products is shown in Figure 3.2.

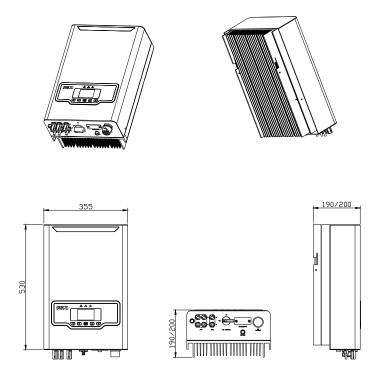


Figure 3.2 Dimensions of Sunttrio Plus 4K/5K/6K/8K/10K



3.4 Datasheet

Sunttrio Plus 4K/5K/6K/8K/10K

Type	Suntrio Plus	Suntrio Plus	Suntrio Plus	Suntrio Plus	Suntrio Plus
Туре	4K	5K	6K	8K	10K
Input (DC)					
Max. DC Power [W]	4840	6050	7260	9680	12000
Max. DC Voltage [V]			1000		
MPPT Voltage Range [V]			160-900		
Nominal DC Voltage [V]			600		
Start Voltage[V]			180		
Min. DC Voltage[V]			150		
Max. DC Input Current PV1 /		11/11		22.	/1.1
PV2 [A]		11/11		22,	/11
Number of MPPT			2		
Number of DC Connection Sets		1/1		2	/1
per MPPT		1/1		Δ,	/ 1
DC Switch			Integrated		
Output (AC)					
Rated AC Power [W]	4000	5000	6000	8000	10000
(@230V,50Hz)	4000	3000	0000	8000	10000
Max. AC Power [VA]	4400	5500	6600	8800	10000
Rated AC Current[A]	5.8	7.2	8.7	11.6	14.5
Max. AC Current [A]	7.0	8.8	10.5	14.1	16.1
Nominal AC voltage/ range	3/N/PE, 22	20/380V,230/4	00V,240/415V	;180V-280V/3	12V-485V
Grid frequency/ range		50Hz,60H	Hz /44Hz-55Hz	z,54-65Hz	
Power factor,adjustable		0.81	eading~0.8 lag	ging	
Total Harmonic Distortion		< 3% (at nominal power)			
(THDi)		> 370	(at nominal pe	Jwei)	
Feed-in Phase / Connection Phase			3 L+N+PE		
Efficiency					
Max. Efficiency	97.8%	97.8%	97.8%	98.0%	98.0%
Euro Efficiency (at 600Vdc)	97.0%	97.2%	97.4%	97.5%	97.6%
MPPT Accuracy	MPPT Accuracy >99.5%				
Protection	Protection				
Internal Over-voltage Protection	Integrated				
DC Insulation Monitoring	Integrated				
DCI Monitoring	Integrated				
GFCI Monitoring	ring Integrated				



Grid Monitoring	Integrated		
AC Short Circuit Current	Interested		
Protection	Integrated		
Thermal Protection	Integrated		
Anti-island protection monitoring	AFD		
Interface			
DC Connection	MC4/H4		
AC Connection	Plug-in connector		
I CD Distribution	3.5 inch Graphic LCD Display, Backlight, Inver	rter Parameter and Data	
LCD Display	Display		
Display Language	English		
Datalogger & Communication	1*RS485/1*RS232/WiFi(Opti	ional)	
General Data			
Topology	Transformerless		
Consumption at Night [W]	<0.6		
Consumption at Standby [W]	<10		
Operating Temperature Range	-25°C to +60°C(45°C to 60°C with derating)		
Cooling Method	Natural Convection		
Ambient Humidity	0% to 100% Non-condensing		
Altitude	Up to 2000m (without power derating)		
Noise [dBA]	<29		
Ingress Protection	IP65 (Indoor & Outdoor Instal	lation)	
Mounting	Rear Panel		
Dimensions (H*W*D) [mm]	530*355*190	530*355*200	
Net Weight [kg]	20.5	23.0	
Standard Warranty [Year]	5 (standard)/10/15/20/25 (Optional)		
	IEC62109-1/2, IEC61000-6-2/3, IEC61683, IEC60068-2, IEC62116,		
	IEC61727, PEA/MEA, NRS 097-2-1, UTE-C-15-712-1,		
Certificates	VDE0126-1-1/A1, VDE-AR-N 4105, AS4777.2, AS4777.3, C-TICK,		
	CQC NB/T 32004, G83-2,NBR 16149, NBR 16150,		
	TF 3.2.1		



Chapter 4 Instructions for installation

4.1 Safety Instructions



DANCER

- · Dangerous to life due to potential fire or electricity shock.
- · Do not install the inverter near any inflammable or explosive items.
- · This inverter will be directly connected with HIGH VOLTAGE power generation device; the installation must be performed by qualified personnel only in compliance with national and local standards and regulations.



NOTICE

- · This equipment is suitable for the pollution degree II.
- · Inappropriate or the unharmonized installation environment may jeopardize the life span of the inverter.
- · Installation directly exposed under intensive sunlight is not recommended.
- · The installation site must have good ventilation condition.

4.2 Pre-installation Check

4.2.1 Check the Package

Although SAJ's inverters have surpassed stringent testing and are checked before they leave the factory, it is possible that the inverters may suffer damages during transportation. Please check the package for any obvious signs of damage and if such evidence is present, do not open the package and contact your dealer as soon as possible.

4.2.2 Check the Assembly Parts

Please refer to the Packing List inside the package container.



4.3 The Determination of the Installation Method and Position

4.3.1 Mounting Method

Please mount the inverter correctly as shown in Figure 4.1 below.

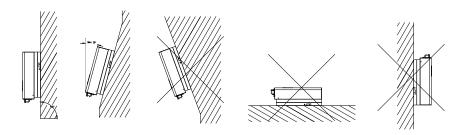


Figure 4.1 Mounting Method

- ① The equipment employs natural convection cooling, and it can be installed indoor or outdoor.
- ② Please install the equipment under the guidance of Figure 4.1. Vertical installation on floor level is recommended. Mount vertically or tilted backwards by max. 15°. Never install the inverter tilted forward, sideways, horizontally or upside down.
- ③Install the inverter at eye level for convenience when checking the LCD display and possible maintenance activities.
- (4) When mounting the inverter, please consider that disassembly for service work may be required.



4.3.2 Installation Position

Do not expose the inverter to direct solar irradiation as this could cause power derating due to overheating. The ambient temperature should be between -25°C \sim +60°C (-13° F \sim 140° F) to ensure optimum operation. Choose locations with sufficient air exchange. Ensure additional ventilation, if necessary.

To make sure the installation spot is suitably ventilated, if multiple SAJ grid-tied solar inverters are installed in the same area, the following safety clearance in Figure 4.2 shall be followed for appropriate ventilation conditions.

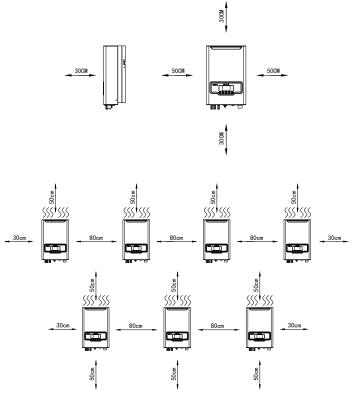


Figure 4.2 Minimum Clearance



4.4 Mounting Procedure

4.4.1 Mark the Positions of the Drill Holes of the Rear Panel

The position of the drill holes can be determined by using rear panel. See Figure 4.3 below:

 


Figure 4.3 Dimensions of Rear Panel

4.4.2 Drill Holes and Place the Expansion Tubes

According to the guides, drill 3 holes in the wall as shown in Figure 4.4 (in conformity with position marked in the above mentioned figure), and then place expansion tubes in the holes using a rubber mallet.

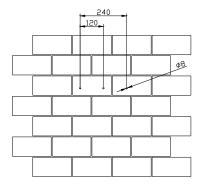


Figure 4.4 Drill Holes



4.4.3 Mount the Screws and the Rear Panel

The panels should be mounted in the mounting position by screws as shown in Figure 4.5.

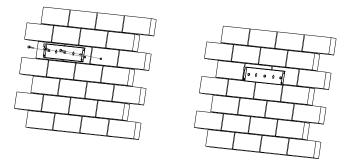


Figure 4.5 Mount the Rear Panel

4.4.4 Mount the Inverter

Carefully mount the inverter to the rear panel. Make sure that the rear part of the equipment is closely mounted to the rear panel.

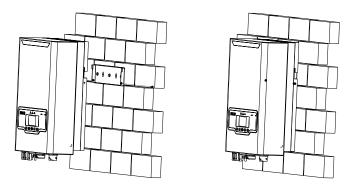


Figure 4.6 Mount the Inverter



Chapter 5 Electrical Connection

5.1 Safety Instruction for Hot-line Job

Electrical connection must only be operated on by professional technicians. Please keep in mind that the inverter is a bi-power supply equipment. Before connection, necessary protective equipment must be employed by technicians including insulating gloves, insulating shoes and safety helmet.

riangle danger

- · Dangerous to life due to potential fire or electricity shock.
- · When power-on, the equipment should be in conformity with national rules and regulations.
- The direct connection between the converter and high voltage power systems must be operated by qualified technicians in accordance with local and national power grid standards and regulations.

A WARNING

• When the photovoltaic array is exposed to light, it supplies a d.c voltage to the inverter.



- Electrical connection should be in conformity with proper stipulations, such as stipulations for cross-sectional area of conductors, fuse and ground protection.
- ·The overvoltage category on DC input port is II, and that on AC output port is III.



5.2 Specifications for Electrical Interface

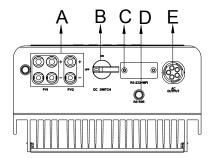


Figure 5.1 Electrical Interface

Code	Name
A	DC Input
В	DC Switch
С	RS232/Wi-Fi Port
D	RS485 Port
E	AC Quick-connect Terminal

Table 5.1 Specifications for Interface

5.3 AC Side Connection

Cross-sectional Area	Outside Diameter of the	
Scope Recommended Value		Cables (mm)
4.0-6.0	6.0	4.2~5.3

Table 5.2 Recommended Specifications of AC Cables



5.3.1 Feed the AC Cable through the AC Waterproof hole.



Figure 5.2 Feed the cables

5.3.2 Connect the cables according to connection marks of L1,L2,L3,N and PE.

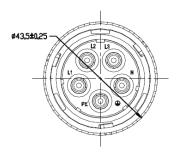


Figure 5.3 Connect the Cables

5.3.3 Secure all Parts of the AC Connector Tightly.



Figure 5.4 Screw the Connector



5.3.4 Plug in the AC connector to the equipment securely, ensuring the pins are connected directly. Then the connection of AC cable is complete.




Figure 5.5 Connect the Inverter

5.4 DC Side Connection

Cross-sectional Area of Cables (mm²)			Outside Diameter of the
Scope Recommended Value		Cables (mm)	
	4.0-6.0	4.0	4.2~5.3

Table 5.3 Recommended Specifications of DC Cables

DC connector is made up of the positive connector and the cathode connector

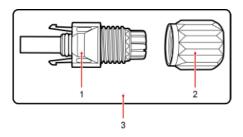


- 1. Insulated Enclosure
- 2. Lock Screw Connector

3. Positive

 Figure 5.6 Positive Connector





- 1. Insulated Enclosure
- 2. Lock Screw
- 3. Cathode Connector


Figure 5.7 Cathode Connector



- Please place the connector separately after unpacking in order to avoid confusion for connection of cables.
- Please connect the positive connector to the positive side of the solar panels, and connect the cathode connector to the cathode side of the solar side. Be sure to connect them in right position.

Connecting Procedures:

- (1) Tighten the lock screws on positive and cathode connector.
- (2) Use specified strip tool to strip the insulated enclosure of the positive and cathode cables to the appropriate length.

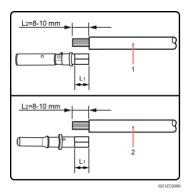


1. Positive Cable

2. Cathode Cable

Figure 5.8 Connecting Cables



- (3) Feed the positive and cathode cables into corresponding lock screws.
- (4) Put the metal positive and cathode terminals into positive cable and cathode cable whose insulated enclosure has been stripped, and crimp them tightly with a wire crimper. Make sure that the withdrawal force of the pressed cable is bigger than 400N.
- (5) Plug the pressed positive and cathode cables into relevant insulated enclosure, a "click" should be heard or felt when the contact cable assembly is seated correctly.
- (6) Fasten the lock screws on positive and negative connectors into respondent insulated enclosure and make them tight.
- (7) Connect the positive and cathode connectors into positive and negative DC input terminals of the inverter, a "click" should be heard or felt when the contact cable assembly is seated correctly.

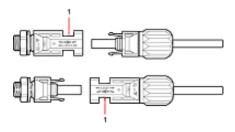

1 Connection Port

Figure 5.9 Connect the Inverter



·Before inserting the connector into the DC input terminal of the inverter, please make sure that the DC switch of the inverter is OFF.



5.5 Communication Connection

Suntrio Plus 4K/5K/6K/8K/10K is equipped with a RS232 and RS485 interface

 


Figure 5.10 Pins of Nine Serial Port Cable

Pin No.	Name
1	DCD (Data Carrier Detect)
2	RxD (Received Data)
3	TxD (Transmitted Ready)
4	DTR (Data Terminal)
5	GND (Signal Ground)
6	DSR (Data Send Ready)
7	RTS (Request To Send)
8	CTS(Clear To Send)
9	RI(Ring Indicator)

Table 5.5 Instruction of Nine Serial Port Pins

- ①RS232 can externally connect with Wi-Fi module. For more details, please refer to the operating manual of Wi-Fi module.
- ②RS232 can externally connect with Wi-Fi module.For more details, please refer to the operating manual of Ethernet module.
- ③RS232 can externally connect with Wi-Fi module. For more details, please refer to the operating manual of GPRS module.

When using RS485 for monitoring, multi-point monitoring can be achieved by



connecting the inverter with RS485 cable. Each connection port should be attached to the connector as shown in Figure 5.11 and Table 5.4. Make sure the connection is tight and secure.



Figure 5.11 3 Ports connector

Number of connector	Color of cable
1	Blue and white
2	Blue
3	Metal-shielded wire

Table 5.4 RS485 Assembly Sequence of RS485



Chapter 6 Debugging Instructions

6.1 Introduction of Human-computer Interface

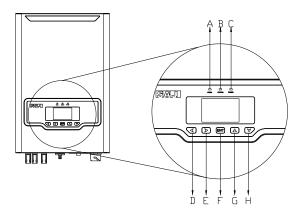


Figure 6.1 Human-computer Interface

Object	Description
A	Communication light: blue light flashing = receiving data
Α	yellow light flashes = sending data
	Status indicator lamp: Red LED light = Fault; Green LED light = operation; when
В	red and green light are all off, the inverter is in initializing state or countdown for
	grid-tie.
С	Power indicator light: yellow light: the power system of inverter is operating
	normally
D◀	Moves the cursor or the focus point to the left
E▶	Moves the cursor or the focus point to the right
F	Starts the menu / button to confirm selection
G▲	Moves the cursor up or increases the setting value
Н▼	Moves the cursor down or reduces the setting value

The inverter provides five buttons for inquiry of operational information and parameters, these five buttons can be used repeatedly.



6.2 First Run Setup

6.2.1 Set the Country

When the solar inverter begins to run for the first time, please configure the time of usage, and the inverter LCD will display as below:

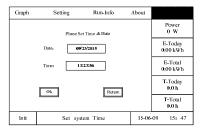


Figure 6.2 Set the Time

Users can press Up, Down, Left, Right and ENT buttons to set local time and confirm the selection. Then the inverter will display the interface for country selection as shown in Figure 6.3:

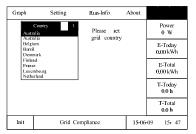


Figure 6.3 Set The Country

Please press the "ENT" button, LCD will show the countries for option. Users can press "▼ " or"▲" to select the correct country and press "ENT" button to confirm the selection.

Note: The configuration of the country of usage must be set before inverter starts to run for its first time, otherwise the inverter will not be on-gird. If users can not locate the corresponding country, please abort the setting and contact the after sales for confirmation.



6.2.2 State

If the country has been set the LCD shows the machine type when the inverter is started up, then it automatically displays the inverter operation status: Initialization, Normal, Wait, Fault or Update.

Data name	Explanation
Initialization	Initialization of the system
Normal	The inverter in normal (function) operation
Wait	The inverter in stand-by state
Fault	A fault occurs during operation
Update	The state of updating firmware

Turn on the AC switch, the LCD begins to count backwards, after this, the inverter initiates connection to the grid.

6.2.3 LCD Menu

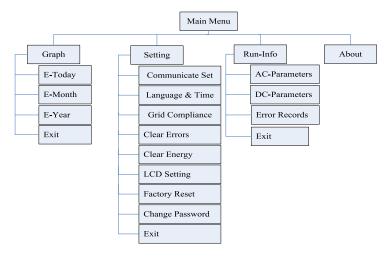



Figure 6.4 LCD Menu




6.2.4 Settings of General Parameters of the Inverter

LCD Display Operation Steps 1. Settings of figures In the main LCD interface, Graph Setting Run-Info About press "ENT" button to enter E-Today Power Graph Set into the selection of "Figure", E-Month 1230W E-Year press V or ▲ to select. The E-Total E-Today 11.33 kWh Exit LCD displays daily, monthly, E-Total 6.0 14.35 kWh yearly and gross generating 3.6 T-Today capacity. 2.4 1.7 h T-Total 21h 4.6 h Normal E-Today 11.33 kWh 15-07-09 15: 47 2. Settings of System Parameter 1. In the main LCD interface. Graph Setting Run-Info About press "ENT" button, then Communicate Set Power Language & Tim 1230W press beto enter into 10.8 9.6 Grid Compliance Clear Errors E-Today "Setting". Clear Energy 11.33 kWh LCD Setting 7.2 Factory Reset E-Total Change Password 14.35 kWh 4.8 Exit 3.6 T-Today 24 1.7 h T-Total 0 46h 21h Communicate Nomal 11.33 kWh 15-07-09 15: 47 E-Todav 2. Press ENT to enter into" Graph Setting Run-Info About Communication Settings". Power Press ▼ and ▲ to set the 0 W E-Today communication address of WFi address: 0.00 kWh Wi-Fi and RS485 The Fault E-Total HS 485 address; 0.00 kWh address is 1. T-Today 0.0 h Ok Return T-Total 00h Normal Communicate Set 15-06-09 15: 47




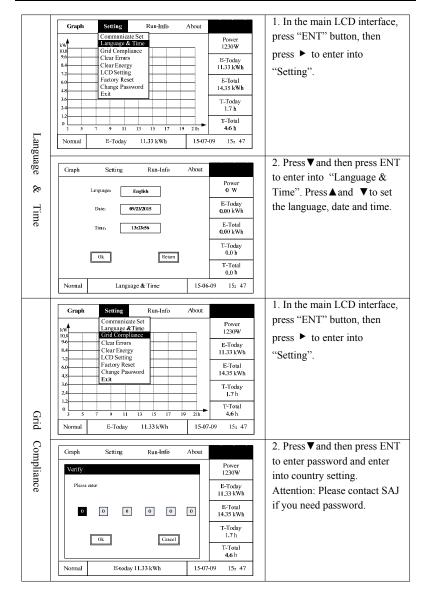




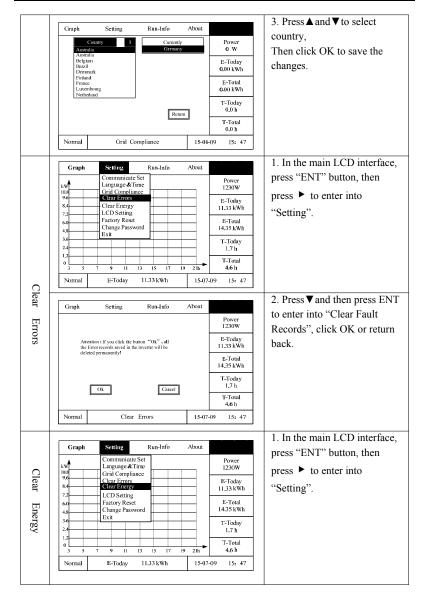




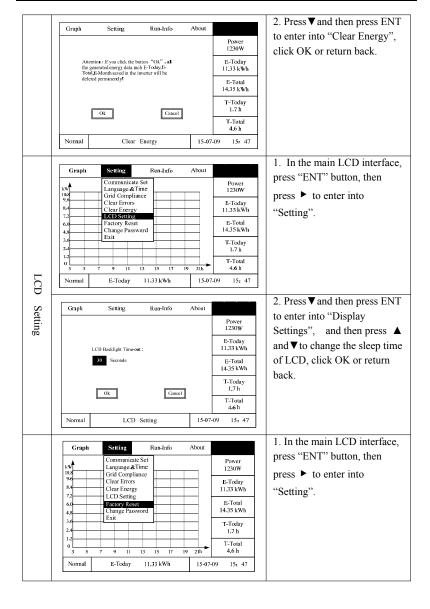



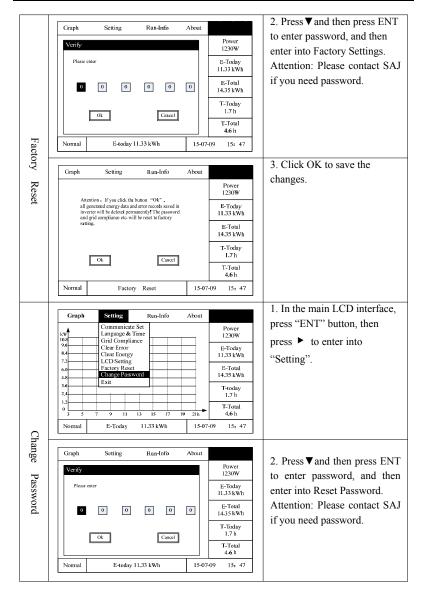





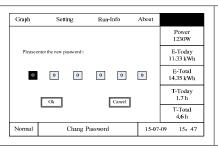

3. Enter the new password and click OK to save the change.

 
6.2.5 Inquiry of Parameters of Inverter



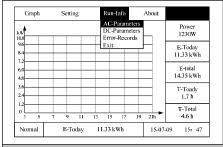

- 1. In the main LCD interface, press "ENT" button, then press ► to enter into "Parameters".
- 2. Press ENT to enter into "Run-Info", then press ▼or ▲ to select the needed parameters, press ENT to enter and to check the parameters.

2. Inquiry of the Information of Inverter

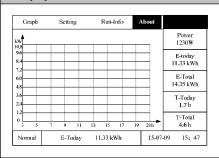

- 1. In the main LCD interface, press "ENT" button, then press ▶ to enter into "About"
- 2. Press ENT to enter into "About" to check the equipment type, series number, machine code, software version of display panel, mainframe version of the control panel and the settings of country.



6.3 Monitoring Operation

The equipment is equipped with a RS232 and a RS485 interface, and the RS232 interface can be connected to Wi-Fi module, Ethernet module, GPRS module which can be used in the monitoring of the operation status.

- ① The equipment can be connected to local internet via a Wi-Fi module and the Wi-Fi web server which is embedded in the machine; following this, the operational status of the inverter can be monitored.
- ② By connecting the Internet through Wi-Fi module and uploading the inverter data to the server, users can monitor the operational information of the inverter by web version web portal or mobile APP (please download the mobile APP from SAJ official website) remotely.
- 3 The equipment can be connected to local internet via Ethernet module and the Wi-Fi web server which is embedded in the machine; following this, the operational status of the inverter can be monitored.
- ④ By connecting the Internet through Ethernet module and uploading the inverter data to the server, users can monitor the operational information of the inverter by web version web portal or mobile APP (please download the mobile APP from SAJ official website) remotely.
- (5) By connecting the Internet through GPRS module and uploading inverter data to the server, users can monitor the operational information of the inverter by web version web portal or mobile APP (please download the mobile APP from SAJ official website) remotely.

Users can apply a Modbus protocol through RS485 together with a SAJ Logger to monitor the data of the inverter. For detailed operation please refer to the SAJ Logger User Manual.



Chapter 7 Fault Code and Troubleshooting

LCD displays Fault codes as shown in the table below:

Error Code	Explanation
01	Relay Error Master
02	Storer Error Master
03	High Temperature Master
04	Low Temperature Master
05	Lost Interior Communication Master
06	GFCI Devices Error Master
07	DCI Devices Error Master
08	Current Sensor Master
09/11/13	L1/L2/L3 Voltage High Master
10/12/14	L1/L2L3 Voltage Low Master
15/16/17	L1/L2/L3 Average Voltage of 10 minutes High Master
18/20/22	L1/L2/L3 Frequency High Master
19/21/23	L1/L2/L3 Frequency Low Master
24/25/26	L1/L2/L3 Grid Lost Error Master
27	GFCI Error Master
28/29/30	L1/L2/L3 DCI Error Master
31	Insulation Error Master
32	Bus Voltage Unbalance Master
33	Bus Voltage High Master
34	Bus Voltage Low Master
35/36/37	L1/L2/L3 Current High Master
38	Bus Voltage High Of Hardware Master
39/40	PV1/PV2 Current High of Hardware Master
41/42/43	L1/L2/L3 Current High of Hardware of Grid Master
45/46/47/48	Fan 1/2/3/4 Error Master
50	Lost interior communication Slave
51/52/53	L1/L2/L3 Data Consistency of Voltage Error Slave
54/55/56	L1/L2/L3 Data Consistency of Frequency Error Slave



57	Data Consistency of GFCI Slave
58/59/60	L1/L2/L3 Data Consistency of DCI Slave
61/63/65	L1/L2/L3 Grid Voltage High Slave
62/64/66	L1/L2/L3 Grid Voltage Low Slave
67/69/71	L1/L2/L3 Frequency High Slave
68/70/72	L1/L2/L3 Frequency Low Slave
73/74/75	L1/L2/L3 No Grid Error Slave
76/77	PV1 /PV2 Voltage High Slave
78/79	PV1/PV2 current High Slave
81	Lost Communication Between Display board & Control board Master

Table7.1 Error Code

General troubleshooting methods for inverter are as follows:

Error	Troubleshooting		
Relay Error	If this error occurs frequently, please contact your distributor or phone SAJ.		
Storer Error	If this error occurs frequently, please contact your distributor or phone SAJ.		
Temperature High Error	Check whether the radiator is blocked, whether the inverter is in too high or too low temperature, if the above mentioned are in normal, please contact your distributor or phone SAJ.		
GFCI Device Error	If this error occurs frequently, please contact your distributor or phone SAJ.		
DCI Device Error	If this error occurs frequently, please contact your distributor or phone SAJ.		
Current Sensor Error	If this error occurs frequently, please contact your distributor or phone SAJ.		
AC Voltage Error	·Check the connection between the inverter and the grid. ·Check the settings of the on-grid standards of the inverter. ·If the volt of the grid is higher than the volt regulated by local grid, please inquire the local grid workers whether they can adjust the volt at the feed point or change the value of the regulated volt. ·If the voltage of the grid is in regulated range as allowed and LCD still in this error, please contact your distributor or phone SAJ.		
Frequency Error	Check the set of country and check the frequency of the local grid, if the above mentioned are in normal, please contact your distributor or phone SAJ.		



Check the connection status between the AC side of the inverter and the grid, if the above mentioned are in normal, please contact your
distributor or phone SAJ.
Check the insulation resistance of the positive side and cathode side
of the solar panel; check whether the inverter is in wet environment;
check the grounding of the inverter. If the above mentioned are in
normal, please contact your distributor or phone SAJ.
If this error exists always, please contact your distributor or phone
SAJ.
Check the insulation resistance of the positive side and cathode side
of the solar panel; check whether the inverter is in wet environment;
check whether the grounding of the inverter is loose or not. If the
above mentioned are in normal, please contact your distributor or
phone SAJ.
Check the connection status between the inverter and the grid and
test whether the volt of the grid is stable or not, if the above
mentioned are in normal, please contact your distributor or phone
SAJ.
Check the settings of the solar panel. SAJ's system design software
can help you. If the above mentioned are in normal, please contact
your distributor or phone SAJ.
If this error exists always, please contact your distributor or phone
SAJ.
Check the settings of the solar panel. SAJ's system design software
can help you. If the above mentioned are in normal, please contact
your distributor or phone SAJ.
Check the connection of communication cables between control
board and display board. If the above mentioned are in normal,
please contact your distributor or phone SAJ.

Table 7.2 Troubleshooting



Chapter 8 Recycling and Disposal

This device should not be disposed as residential waste. An Inverter that has reached the end of its life and is not required is to be returned to your dealer or you must find an approved collection and recycling facility in your area.



Chapter 9 Guarantee Service

Please refer to the warranty card.



Chapter 10 Contact SAJ

Guangzhou Sanjing Electric Co., Ltd.

SAJ Innovation Park, No.9, Lizhishan Road, Guangzhou Science City, Guangdong, P.R.China.

Postcode: 510663

Web: http://www.saj-electric.com

Technical Support & Service

Tel: +86 20 6660 8588

Fax: +86 20 6660 8589

E-mail: service@saj-electric.com

International Sales

Tel: 86-20-66608618/66608619/66608588/66600086

Fax: 020-66608589

E-mail: info@saj-electric.com

Domestic Sales

Tel: 020-66600058/66608588

Fax: 020-66608589



SAJ Warranty Policy

Standard Warranty Period

Guangzhou Sanjing Electric, Co., Ltd ("SAJ") grants a standard warranty period of 66 months (5.5 years) for the Sununo-TL Series inverters & Suntrio-TL Series inverters and Sununo Plus Series inverters & Suntrio Plus Series inverters, starting from the date of shipment from SAJ factory or 60 months (5 years) starting from the date of purchased invoice marked (whichever is longer).

Extension of Warranty

The purchaser of SAJ inverters (Sununo-TL Series inverters & Suntrio-TL Series inverters and Sununo Plus Series inverters & Suntrio Plus Series inverters) should extend the warranty period in 18 months from the date of settlement or 30 months from the date of shipment from SAJ by providing the serial number of the unit and purchased receipt (whichever is shorter). You can purchase the warranty extension for 10 years, 15 years, 20 years or 25 years but do not apply the extension beyond the specified date, or else your application will be unacceptable. Please refer to the Warranty Extension Order Form for more details.

Once the purchase of the warranty extension goes into effect, SAJ will send the warranty extension certificate to the customer for confirming the extended warranty period.

Warranty Conditions

If your inverter gets fault and requires troubleshooting, please contact your distributor or dealer directly. Alternatively, feedback briefly to SAJ service hotline for logging and send your warranty card to our service department by fax/email to process the warranty claim.

During the Warranty Period, SAJ covers all costs for replacing any product or parts



of the product proved to be defective in design or manufacture. To claim the warranty under the warranty policy of SAJ, you need to supply us with the following information and documentation regarding the faulty inverter:

- 1.Product Model No.(e.g. Suntrio Plus 8K) and serial number (e.g.13020G1141CH00014).
- 2. Copy of the invoice and warranty certificate of the inverter.
- 3. Copy of the installation report and installation date.
- 4.Error message on LCD screen (if available) or any information which would be helpful to determine the defect
- 5. Detailed information about the entire system (modules, circuits, etc.).
- 6.Documentation of previous claims/exchanges (if applicable).

After receiving above information, SAJ will decide how to proceed the service

- 1. Repaired by SAJ factory, or SAJ authorized service center overhaul.
- 2. Repaired on-site by SAJ Service Center.
- 3. Offer a replacement device of equivalent value according to model and age.

In the case of an exchange, the remaining portion of the original warranty period will be transferred to the replacement device. You will not receive a new certificate, as your entitlement is documented at SAJ.

If the inverter needs to be replaced following assessment, SAJ will send a replacement unit immediately. The defective inverter should be sent back to the closest SAJ Service Center by packing in its original package if possible.



Service after warranty expiration

If the inverters for maintenance are out of warranty, SAJ charges an on-site service fee, parts, labor cost and logistic fee to end-user. Detailed standard refers to the listed table

Item	Return Factory Maintenance	On-site Maintenance
Without parts	Labor + Logistic fee	Labor + On-site attendance
replacement	(to & from SAJ)	fee
With parts replacement	Labor + Parts + logistic fee	Labor + On-site attendance
	(to & from SAJ)	fee + Parts

- On-site attendance fee: Cost of travel and time for the technician in attending on-site
- Parts: Cost of replacement parts (including any shipping/admin fee that may apply).
- Labor: Labor time fee charged for the technician, who is repairing, maintaining, installing (hardware or software) and debugging the faulty product.
- Logistic fee: Cost of delivery, tariff and other derived expense when defective products are sent from user to SAJ or/and repaired products are sent from SAJ to user.

Exclusion of Liability

Any defect caused by the following circumstances will not be covered by the manufacturer's warranty (the Dealers or Distributors are responsible and authorized by SAJ for the following investigation):

- "Warranty Card" not being sent back to Distributor/Dealer or SAJ;
- Product modified, parts replaced or attempt to maintain;
- ◆ Changes, or attempted repairs and erasing of series number or seals by non SAJ technician;



- Incorrect installation or commissioning;
- ◆ Failure to comply with the safety regulations (VDE standards, etc.);
- ◆ The inverter has been improperly stored and damaged while being stored by the Dealer or the end user:
- ◆ Transport damage (including scratch caused by movement inside packaging during shipping).A Claim should be made directly to shipping company/insurance Company as soon as the container/packaging is unloaded and such damage is identified;
- ◆ Failure to follow any / all of the user manual, the installation guide and the maintenance regulations;
- ◆ Improper use or misuse of the inverter;
- ◆ Insufficient ventilation of the inverter;
- ◆ Influence of foreign objects and force majeure (lightning, grid overvoltage, severe weather, fire, etc.)
- ◆ For further information on SAJ warranty regulation and reliability, please visit our website: www.saj-electric.com.



Warranty Card

The installer should fill in the second form while installing the inverter. For warranty claim, please complete the below forms and send this page to SAJ attached with the Customer's invoice.

Zip:

Country:

For Customer to fill in

Name:

City:

Tel:	Fax:		E-mail:		
Information on Device	2				
Device type:		Serial No.(S/N):			
Invoice No:		Commissioning date::			
Fault time:					
Error message (Display reading):					
Brief fault description & photo:					
G:		D .			
Signature:		Date:			



For Installer to fill in

Modules Used:				
Modules Per String:		No. of String:		
Installation Company:		Contractor License Number:		
Company:				
City:	Country:		Zip:	
Tel:	Fax:		E-mail:	
Signature:		Date:		



Guangzhou Sanjing Electric CO., LTD.

ADD: SAJ Innovation Park, No.9, Lizhishan Road, Science City,

Guangzhou High-tech Zone, Guangdong, P.R.China

Zip: 510663 Tel: +86 20 6660 8588 Fax: +86 20 6660 8589

Web: http://www.saj-electric.com

Edition No: V3.01